

# STEP H / V

IRP00212

Istruzioni di montaggio ed uso  
Operation instructions  
Instructions de montage et usage  
Montage- und Bedienungsanleitung  
Instrucciones de montaje y uso  
Instrucțiuni pentru montare și utilizare

# IRSAP

creating your comfort

IRSAP SPA

45031 Arquà Polesine (RO) Italy  
Tel. +39 0425 466611 - Fax +39 0425 466662  
Website: <http://www.irsap.com>  
E-mail: [info@irsap.it](mailto:info@irsap.it)

IR GROUP SARL

19,Chemin de la Plaine 69390 Vourles (France)  
Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40  
Web: <http://www.irsap.com>  
E-mail: [irsaprhoss@irgroup.fr](mailto:irsaprhoss@irgroup.fr)


IRSAP-RHOSS Clima Integral, S.L.

Oficina y Almacén: P.I.CAMI RAL  
Leonardo da Vinci,4 08850 Gavà (Barcelona)  
Tel. 93 633 47 00 - Fax 93 633 47 04  
E-mail: [www.informacion@irsap.com](mailto:www.informacion@irsap.com)  
[www.irsap.com](http://www.irsap.com)




IRROM Industrie S.R.L.

Str. Pripicală 1/A, Sat Fundătara, Iclod 407336,  
jud. Cluj, România  
Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404  
Web: [www.irsap.ro](http://www.irsap.ro)

Accessori non inclusi-Accessoires non compris-  
Accessories not included-Zubehör nicht inklusive-  
Accesorios no incluidos-Accesorii neincluse

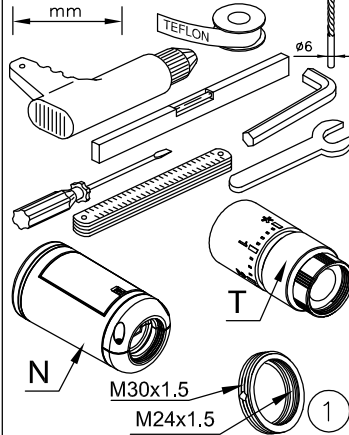

Accessori inclusi-Accessoires compris-  
Accessories included-Zubehör inklusive-  
Accesorios incluidos-Accesorii incluse

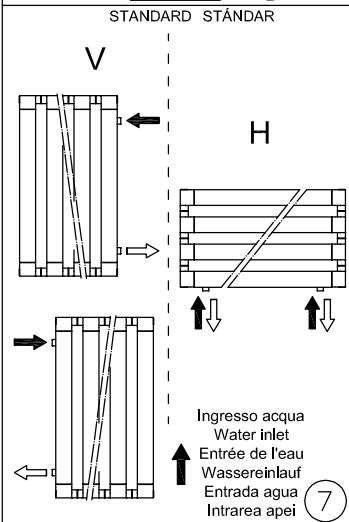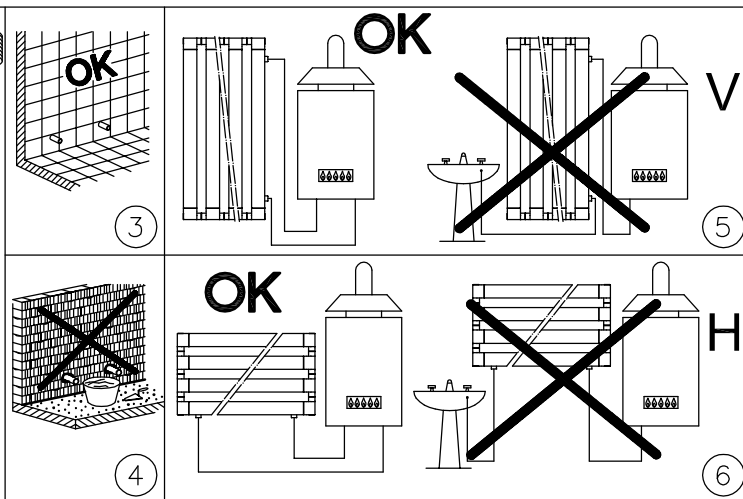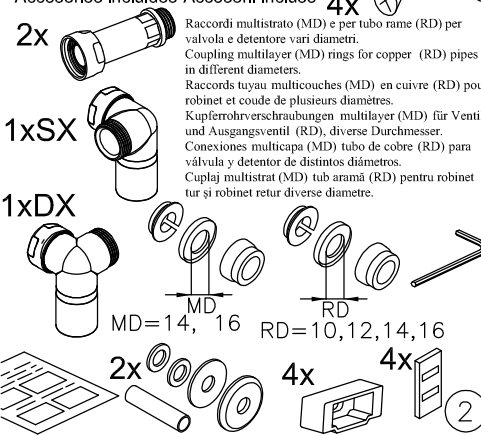

E	L	X	Y	H	H'	Z
mm	mm	mm	mm	mm	mm	mm
3	310	235	1475	1500	1276	2.5±4
			1775	1800	1576	
4	430	355	1475	1500	1276	
			1775	1800	1576	
			1975	2000	1776	
6	670	595	575	600	376	
			1775	1800	1576	
			1975	2000	1776	
8	910	835	575	600	376	
			1775	1800	1576	
			1975	2000	1776	
10	1150	1075	575	600	376	

